

BERINGER SA, ZA, F-42940 Châtelneuf Tel: (+33) 4 77 76 82 95 Fax: (+33) 4 77 76 80 09 E-mail: contact@beringer.fr

## Procedure to change brake pads on 2 piston caliper ref: EA-01

| Dossier ref: MONT_PADS_1<br>Equipment concern: caliper EA-01 |                 |            |
|--|-----------------|------------|
| Révision   | Description     | Date       |
| 0  | Initial edition | 12/09/2007 |

## 1. Remove the 3 screws M8


Heat the caliper to 60-80°C can help to remove the screws.

Screws to be removed

2. Clean around the pistons with a dry cloth

## 3. Push back the pistons with one finger (no force is needed).

If you cannot push back the piston with one finger, caliper must be checked and rebuilt.

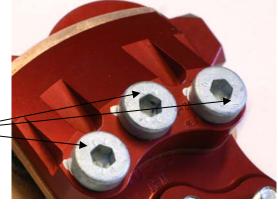



## 3. Assemble the pads and back plate with crankcase



Put blue Loctite 243 on the end of each screw and all of them

Then torque to **25N.m** each screw (respect of torque value is very important).

Put a drop of white paint between each screw and back plate

> Torque to 25N.m (220 IN.LBS)

